

Our Favourite Profiles




How to Install Mouldings

We recommend prefinishing the mouldings before installing. Install the moulding piece by piece, working your way around the room, leaving the nail heads exposed to allow for any repositioning. Avoid nailing the last 2 to 3 inches in each piece to avoid splitting. Nail in the curved or cove part of the moulding to better hide the nail holes. Nail mouldings into wood studs or jambs. Any good quality finishing nail properly counter sunk works well. C-clamps should be used to secure the moulding in the mitre box for more accurate cuts. Always use scrap wood between the clamp and the moulding to prevent surface damage.


Casings

Casings define the overall character of a room and are often the most visible part of the trim. They are used primarily to cover the gap between drywall and the door or window frame. Casings are generally thicker than the base mouldings. In classical architecture, an architrave described the main beam resting on the tops of the columns. Today it is often used as a decorative moulding for ornamentation or finishing at the top of windows and doors.

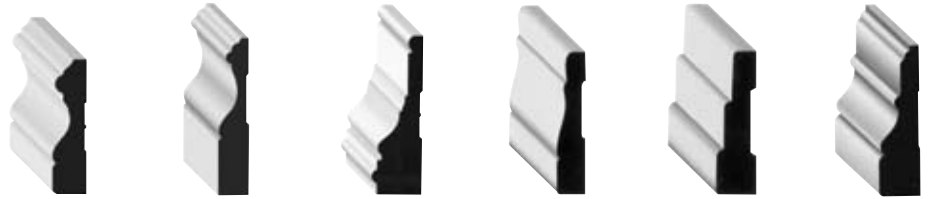

Baseboards

Baseboards are placed along the wall at the floor. They should be chosen to work in harmony with your casings to finish and tie the room together. Baseboards are usually thinner than the casing.

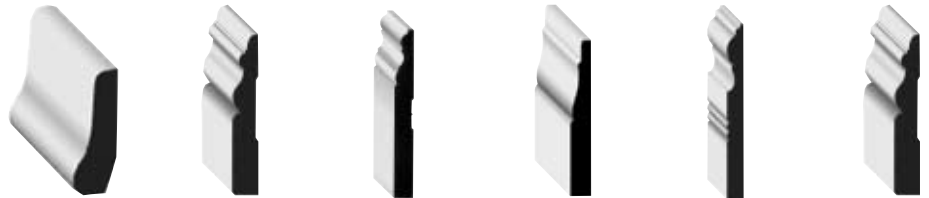

Crowns

Crowns are placed along the wall at the ceiling. They come in a wide range of patterns and sizes. Crowns soften the transition from wall to ceiling while adding a distinctive look and charm to your room.



Flat Stock

Primed Flat Stock

Available in various widths perfect for use as casing and baseboards for that clean contemporary look.

Ultralite Flat Stock

1/3 less weight than regular MDF, a super smooth primer and easy to nail; Ultralite is the ideal choice for most paint grade projects.

Architraves & Handrails

In classical architecture, an architrave described the main beam resting on the tops of the columns. Today it is often used as a decorative moulding for ornamentation or finishing at the top of windows and doors. Handrails are available with or without a center plow to accept wood spindles.



MOULDING & MILLWORK